Publication No. 3H8728
12FEB99

INSTALLATION INSTRUCTIONS
for the
BLOWER MOTOR AY
on the
Kodak RP *X-Omat* PROCESSOR, MODEL M6B
Serial No. 20,000 and Above
Service Code: 3040

Kodak Professional Industrex M6I PROCESSOR
Serial No. 3,000 and Above
Service Code: 3108

Kodak X-Omat PROCESSOR, MODEL M6RA
Service Code: 3056

Kodak X-Omat 460/480 RA PROCESSORS
Service Codes: 3056 and 3228

HEALTH IMAGING

© Eastman Kodak Company

PLEASE NOTE The information contained herein is based on the experience and knowledge relating to the subject matter gained by Eastman Kodak Company prior to publication.

No patent license is granted by this information.

Eastman Kodak Company reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from any use of this information, even if loss or damage is caused by Kodak's negligence or other fault.

This equipment includes parts and assemblies sensitive to damage from electrostatic discharge. Use caution to prevent damage during all service procedures.

BLOWER MOTOR AY 9B8359 includes:

Part No.	Description	Qty.	Note
8B6916	BLOWER MOTOR	1	Includes the CAPACITOR 9B8374
9B8374	CAPACITOR	1	
9B8367	CLAMP	1	
852971	SCREW	1	
180977	WASHER	1	
187213	LOCK WASHER	1	
126869	NUT	1	
3H8728	INSTALLATION INSTRUCTIONS	1	

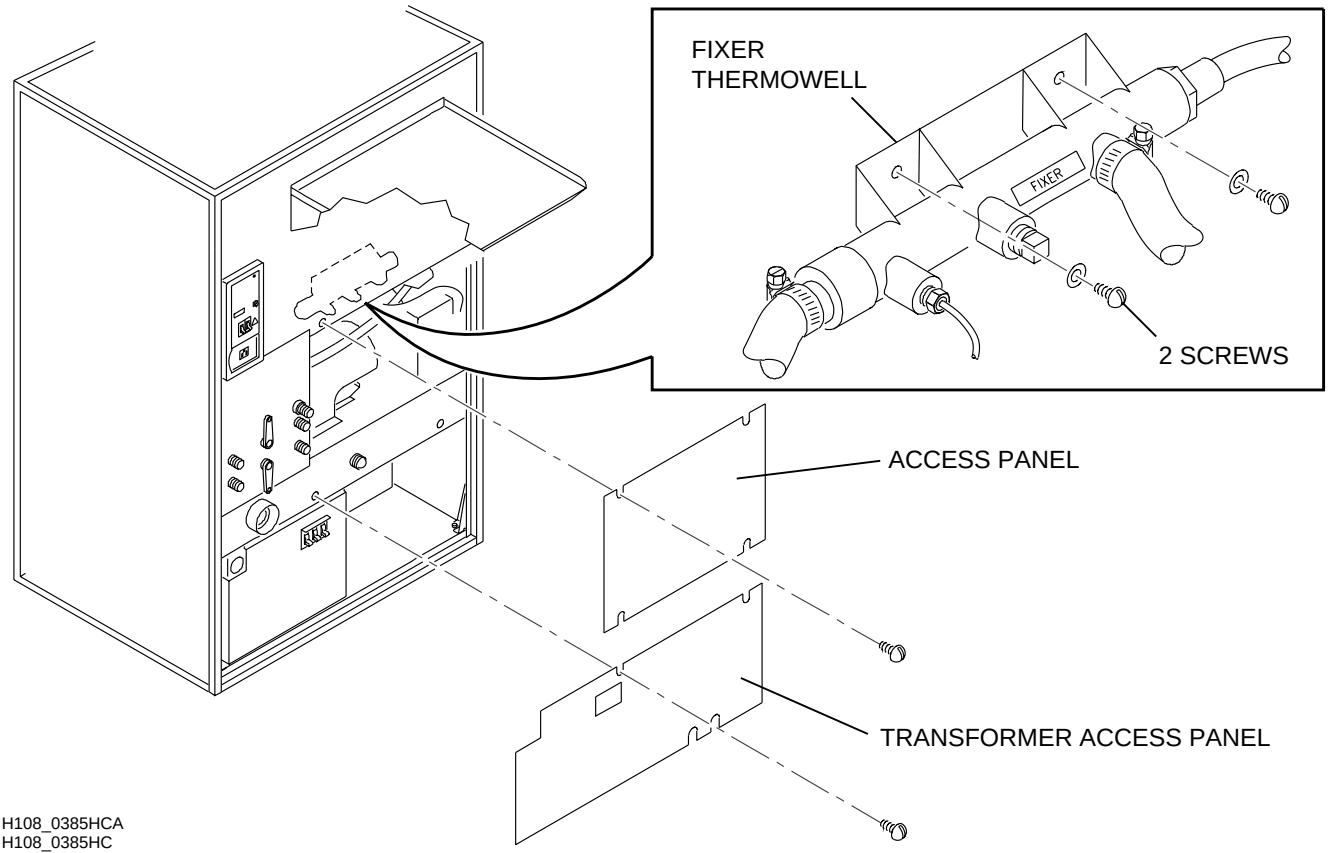

H108_0385HCA
H108_0385HC

Warning
Dangerous voltage

[1] De-energize the PROCESSOR.

[2] Remove:

- ACCESS PANEL
- TRANSFORMER ACCESS PANEL

[3] Remove the 2 SCREWS to loosen the FIXER THERMOWELL.

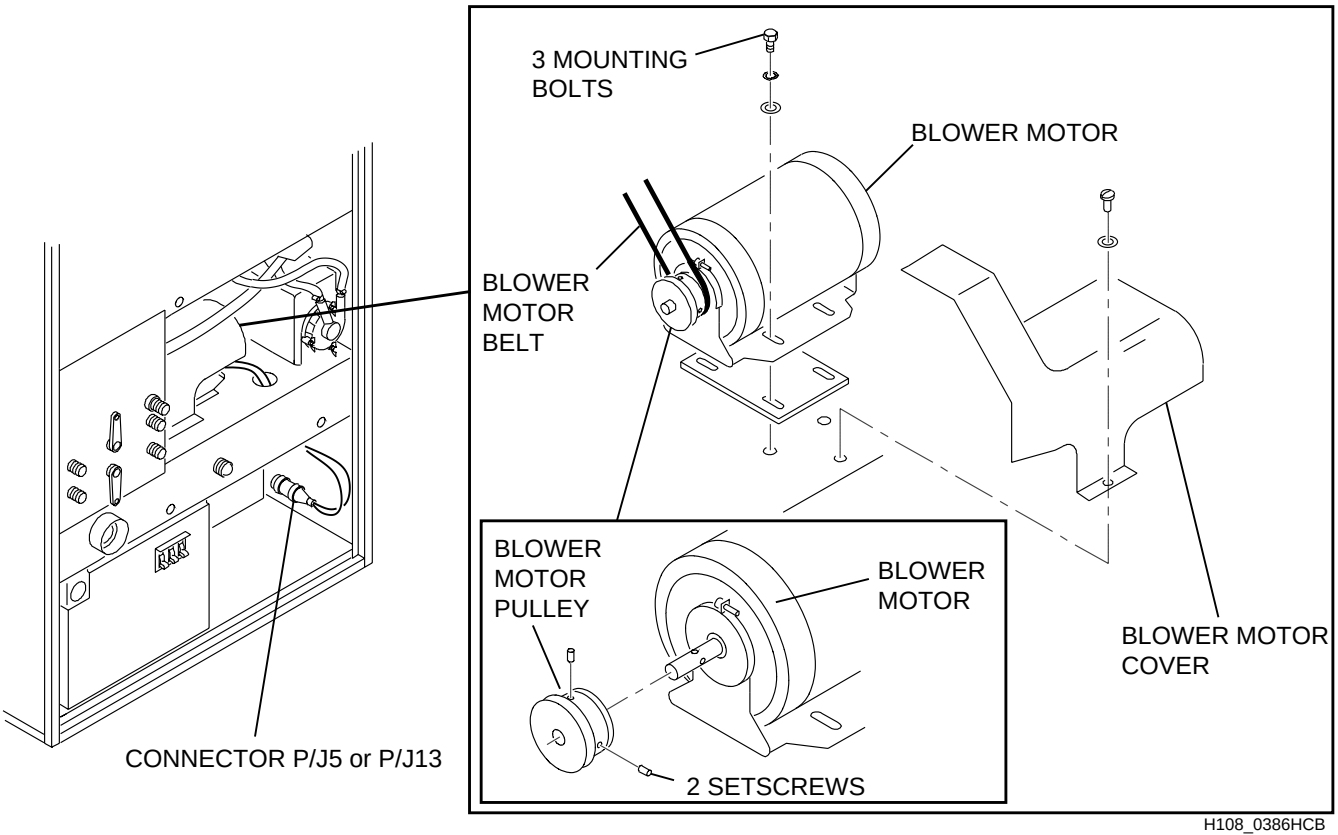

H108_0386HCB
H108_0386HC

[4] Remove:

- BLOWER MOTOR COVER
- 3 MOUNTING BOLTS
- BLOWER MOTOR BELT
- CONNECTOR:
  - P/J5 for PROCESSOR MODEL M6RA, 460/480 RA PROCESSOR
    or
  - P/J13 for the M61 PROCESSOR
- BLOWER MOTOR

[5] Loosen the 2 SETSCREWS.

[6] Remove the BLOWER MOTOR PULLEY.

[7] Install the BLOWER MOTOR PULLEY onto the new BLOWER MOTOR. Do not tighten the 2 SCREWS.

[8] Install the new BLOWER MOTOR onto the PROCESSOR.

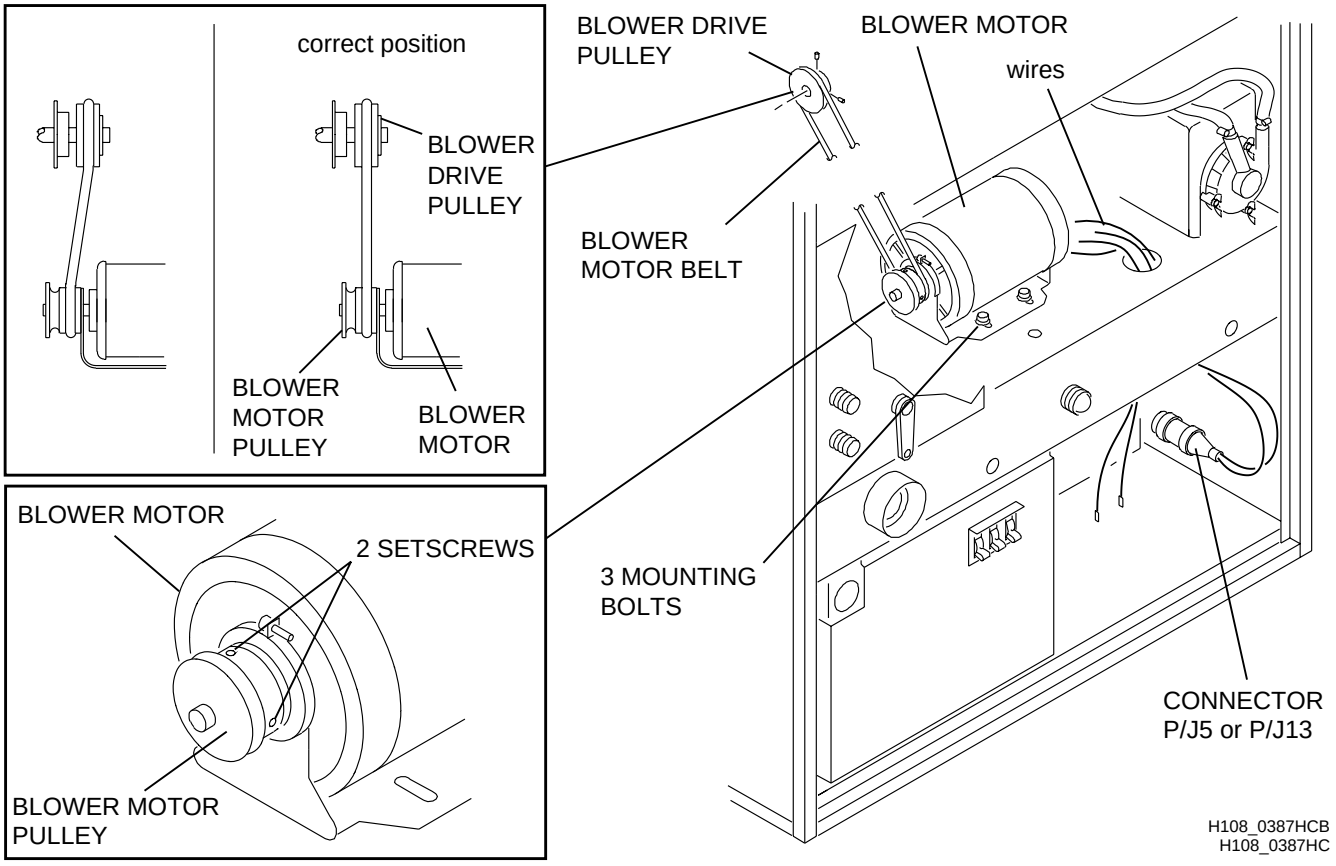

[9] Route CONNECTOR P/J5 or P/J13 and the wires through the hole.

[10] Install:

- CONNECTOR P/J5 or P/J13
- BLOWER MOTOR BELT

[11] Use the illustration above to align the BLOWER MOTOR PULLEY with the BLOWER DRIVE PULLEY.

[12] Tighten the 2 SETSCREWS and 3 MOUNTING BOLTS.

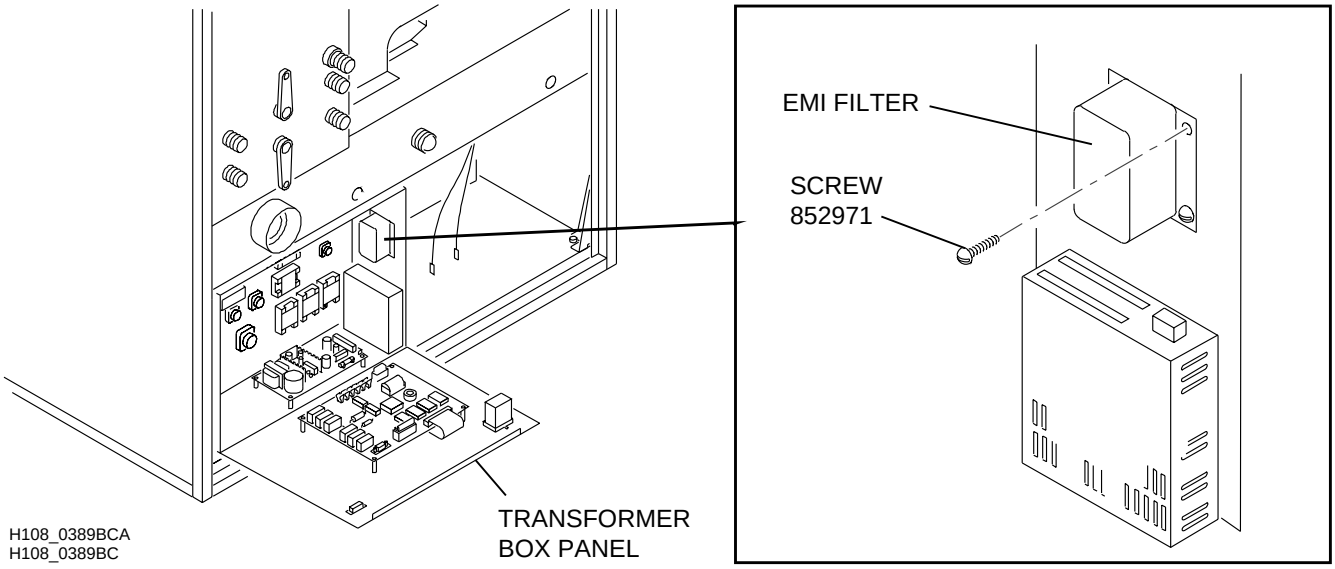

Warning

Dangerous voltage

[13] Open the TRANSFORMER BOX PANEL.

[14] Remove and discard the top SCREW for the EMI FILTER.

[15] Install the new SCREW.

[16] Close the TRANSFORMER BOX PANEL.

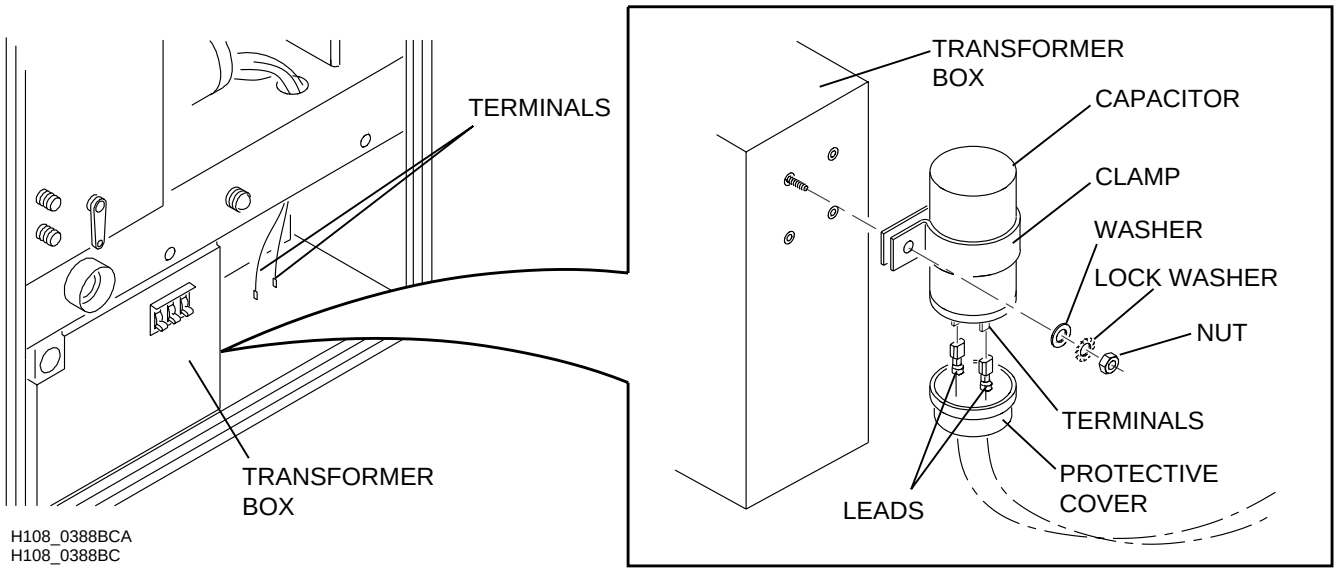

H108_0388BCA
H108_0388BC

Caution

To prevent damage from leaks or spills, the CAPACITOR must be installed with the TERMINALS in the down position. If the CAPACITOR has a PROTECTIVE COVER, route the LEADS through the PROTECTIVE COVER.

[17] Install:

- new CLAMP around the new CAPACITOR
- new WASHER
- new LOCK WASHER
- new NUT
- LEADS onto the TERMINALS
- PROTECTIVE COVER - if available
- CAPACITOR onto the TRANSFORMER BOX

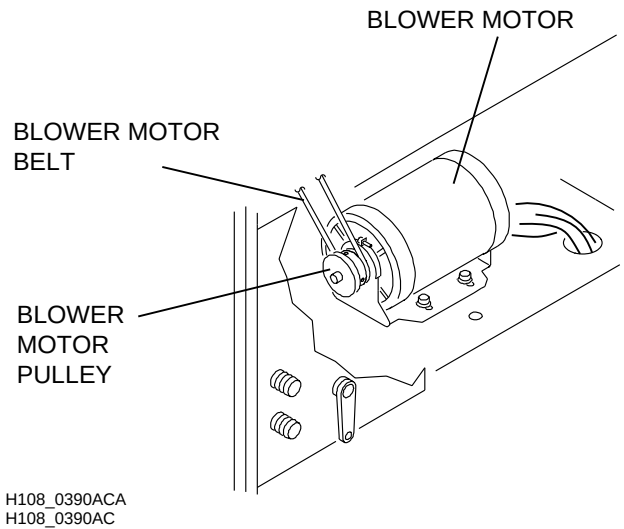

H108_0390ACA
H108_0390AC

[18] Check for the correct tension of the BLOWER MOTOR BELT. If the tension is correct, advance to Step 23.

Warning

Dangerous voltage

[19] Energize the PROCESSOR.

[20] If the BLOWER MOTOR BELT makes noise, de-energize the PROCESSOR.

[21] If necessary, adjust the position of the BLOWER MOTOR and/or BLOWER MOTOR PULLEY.

[22] Check for the correct tension again.

[23] Install:

- BLOWER MOTOR COVER
- FIXER THERMOWELL
- TRANSFORMER ACCESS PANEL
- ACCESS PANEL

[24] Check the PROCESSOR for correct operation.

Publication History

Publication Date	ECO No.	Publication No.	Affected Pages	File Name	Notes
12FEB99	2630-168	3H8728	All	ii3228_5_12feb99.fm	First printing

Kodak, Industrex, Kodak Professional, and *X-Omat* are trademarks.